



Thanks for buying the wifi module for the Eyehome+ detector of COFEM. Read all instructions before installing the smoke alarm, so it will protect your home in the best possible way.

- If you are installing the smoke alarm for some other person, leave these instructions or a copy of them with him/her.

The module MDAHWF allows communicate Eyehome+ smoke detectors installed with RF communication band and in the same time with a wireless local area network allows do since your smartphone by application FamilyWell to check the status of your detectors, receive alerts, customize alert rules, operating modes, etc...

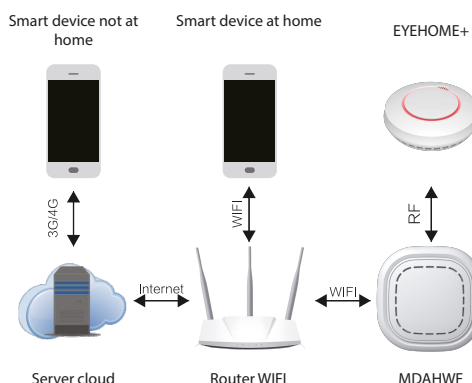

To configure your installation, connect your MDAHWF module to the electrical network.

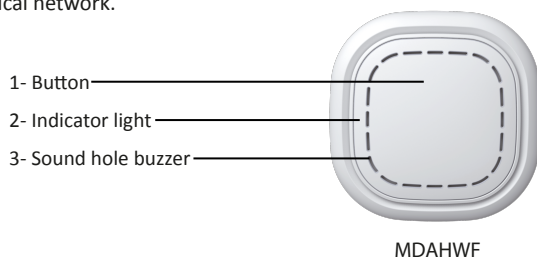

El dispositivo se encenderá indicando el estado mediante diferentes colores de iluminación:

- 1- Yellow led light flashes: wifi network is not connected or failure.
- 2- Yellow led light always on: wifi network is not connected or failure.
- 3- Blue led light flashes: module is on net configuration status.
- 4- Green led light flashes: add device mode.
- 5- Purple led light always on: add device mode.
- 6- Green led light always on: at home mode.
- 7- Blue led light always on: not at home mode.
- 8- Purple led light always on: sleep mode.
- 9- White led light always on: self defined mode.

Connect the wifi module MDAHWF and after 5 seconds, hold down the button until the blue light flashes. Follow these steps to download and configure the application "Family Well".



1- Download and install the application

①


For Android: Open the Google play application market, search "FamilyWell" app, download and install it.

For Iphone: search "FamilyWell" app, download and install it in the App Store.

②

Set the relevant permissions after installation is complete.


The setting page will be different among different brands of mobile phone. Incorrect settings will affect message push function.

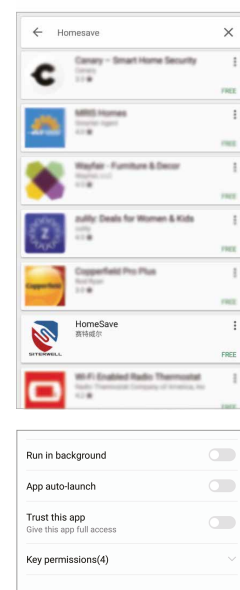

2- Registration and login


①

Open the App and press the register button.

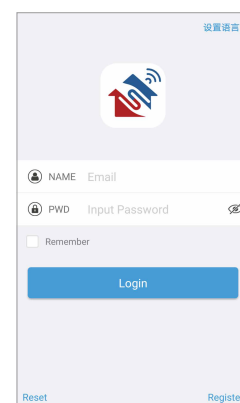


②

Enter your email to register an account.

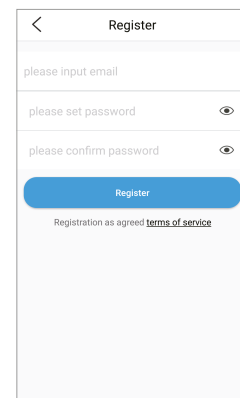

③


Enter your account number and password to login App.

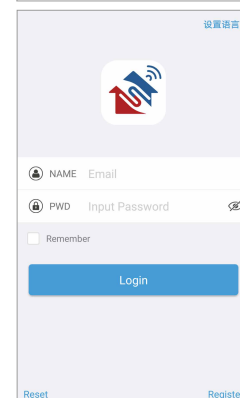

3- Module configuration


①

Follow the prompts to bring the module into the net configuration mode. At the same time, the blue led light flashes.

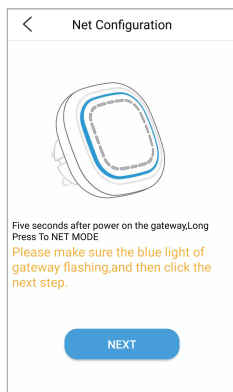

②

Enter the wifi password and press "connect" button.

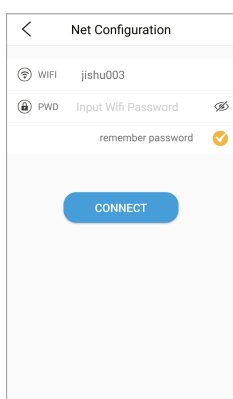


③

Net configuration is in progress.
Follow the prompts to try again if failed.




④

Press "device" button on the App home page.

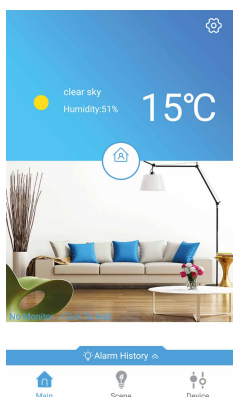


⑤

Press "+" button in device list to add an Eyehome+ detector.

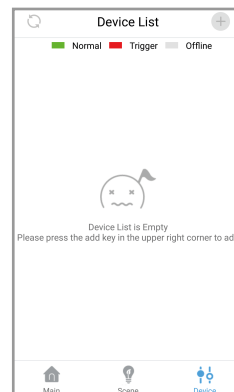

⑥


Press the test button three times consecutively. The detector will turn on the red light and the buzzer will sound, indicating that the detector has been configured.

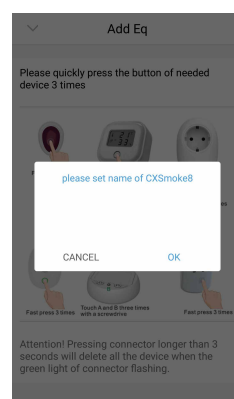

⑦

When the configuration is finished, you can change the name of the detector. For example: kitchen, bedroom, etc...

If you want to install more detectors, follow the instructions from step 5. When you finish press the "main" button.

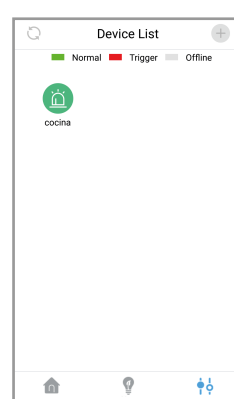

⑧

To show the detector parameters, press the icon of the detector do you want. In this window, you can do a test alarm of this detector (to stop the test alarm, you will press the test button of the detector).

We also have the option to make an emergency call to a phone number previously configured from the home page.

Finally, in the "manage" option you can replace, delete or edit the name of the detector you want.

